


## How to use the PCB & PCB STOPPER



1.PCB / PCB STOPPER



2.Remove the paper from the PCB STOPPER and affix the rubber on the hole of the PCB.

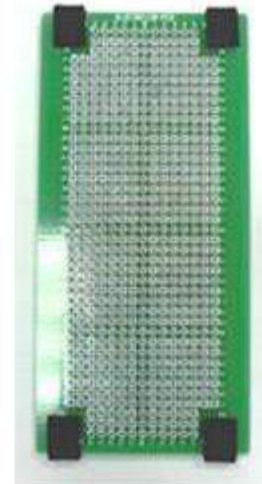

3. Repeat 2 for the other holes.



4.Insert the PCB into the extruded body.



5.Done